 


Spare Parts List CP 0003 Tamper



Chicago Pneumatic

www.cp.com

2005-09 No. 9800 0532 01

© Copyright Stockholm, Sweden CP 0003 Spare parts list

Contents	Pages
General information	4
Exploded views and tables	6-7

Spare parts list CP 0003

GENERAL INFORMATION

Welcome! Protect your investment in the world's finest air tools. Use genuine CP replacement parts.

The purchase of replacement parts for your CP tools deserves the same good judgment that resulted in the buying of the tools themselves. Each genuine CP part is made from carefully selected and inspected material, subjected to sophisticated machinery and finishing processes and heat-treated to produce just the right combination of hardness, ductility and impact resistance for its intended use. All parts are manufactured concurrently with those used in production tools, and are identical to them. The use of parts other than genuine CP replacement parts can lead to substandard performance, early failure, possible damage of other parts and, in some instances, unsafe conditions.


To reduce the risk of injury, read and understand the Operating Instructions manual and the percussion tool safety instructions before operating the tool.

CP 0003 is a pneumatic tool designed to effectively compact soil around foundations and other structures and for compacting backfill in trenches. It is used to handle light-to-medium applications.

CP 0003 Spare parts list

Spare parts list CP 0003

EXPLODED VIEW OF CP 0003

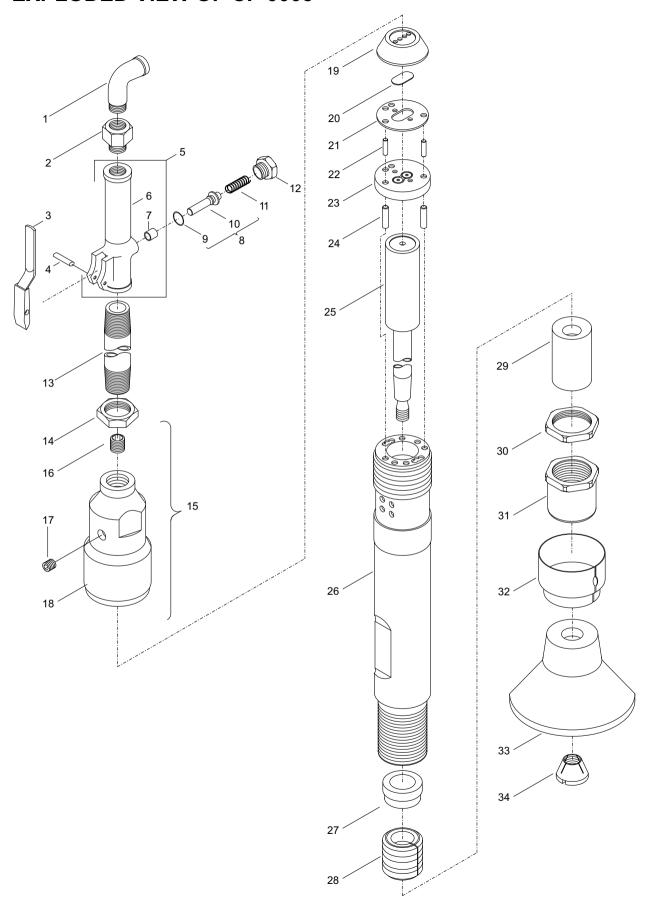

CP 0003 Spare parts list

Ref. No.	Ordering No.	Qty.	Description
1	R072457	1	Elbow - Street (1/2 " - 90)
2	P001995	1	Strainer - Air
3	P001903	1	Lever - Valve
4	P001921	1	Pin - Lever
5	P007350	1	Body - Throttle valve (Includes item No. 6 & 7)
6		1	Body - Throttle valve
7	P001814	1	Bushing - Throttle valve
8	P087671	1	Valve - Throttle (Includes item No. 9 & 10)
9	CA088867	1	O-ring
10		1	Valve - Throttle
11	P001858	1	Spring - Throttle valve
12	P001964	1	Cap - Valve
13	P071147	1	Pipe - Extension
14	F003087	2	Locknut - Pipe
15	P078139	1	Cylinder head assembly (Includes item No. 16, 17 & 18)
16	P084132	1	Plug - Oil regulating
17	C068799	1	Plug - Filler
18		1	Cylinder head
19	P073185	1	Lid - Upper case
20	P071358	1	Valve
21	P073187	1	Case - Valve
22	P073120	2	Dowel - Valve case
23	P073118	1	Lid - Lower case
24	P073119	2	Dowel - Cylinder
25	P089009	1	Piston
26		1	Cylinder
27	P070649	1	Bushing - Piston rod
28	P071390	1	Packing - Piston
29	P070646	1	Bushing - Piston rod
30	P070931	1	Locknut - Retainer
31	P070651	1	Retainer - Piston bushing
32	P070643	1	Defector - Exhaust
33	P089008	1	Butt - 5" Dia. Aluminum
34	P089006	1	Locknut - Butt



2005-09 No. 9800 0532 01

©Copyright Stockholm, Sweden

