 


Spare Parts List

CP 0004 Tamper





www.cp.com

2005-08 No. 9800 0533 01 © ^{Copyright} Stockholm, Sweden

Contents

Pages

General information	4
Exploded views and tables	6-9

GENERAL INFORMATION

Welcome! Protect your investment in the world's finest air tools. Use genuine CP replacement parts.


The purchase of replacement parts for your CP tools deserves the same good judgment that resulted in the buying of the tools themselves. Each genuine CP part is made from carefully selected and inspected material, subjected to sophisticated machinery and finishing processes and heat-treated to produce just the right combination of hardness, ductility and impact resistance for its intended use. All parts are manufactured concurrently with those used in production tools, and are identical to them. The use of parts other than genuine CP replacement parts can lead to substandard performance, early failure, possible damage of other parts and, in some instances, unsafe conditions.

To reduce the risk of injury, read and understand the Operating Instructions manual and the percussion tool safety instructions before operating the tool.

CP 0004 is a pneumatic tool designed to effectively compact soil around foundations and other structures and for compacting backfill in trenches.

5

EXPLODED VIEW OF CP 0004 RV

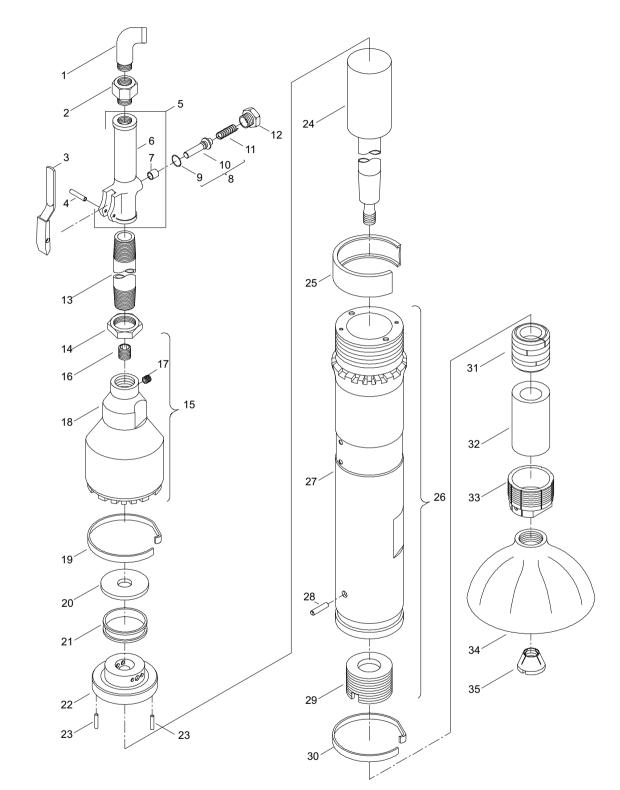

Ref. No.	Ordering No.	Qty.	Description
1	R072457	1	Elbow - Street (1/2 " - 90)
2	P001995	1	Strainer - Air
3	P001903	1	Lever - Valve
4	P001921	1	Pin - Lever
5	P007350	1	Body - Throttle valve (Includes item No. 6 & 7)
6		1	Body - Throttle valve
7	P001814	1	Bushing - Throttle valve
8	P087671	1	Valve -Throttle (Includes item No. 9 & 10)
9	CA088867	1	O-ring
10		1	Valve -Throttle
11	P001858	1	Spring - Throttle valve
12	P001964	1	Cap - Valve
13	P071147	1	Pipe - Extension
14	F003087	2	Locknut - Pipe
15	P079695	1	Cylinder - Head assembly (Includes item No. 16, 17 & 18)
16	P084132	1	Plug - Oil regulating
17	C068799	1	Plug - Filler
18		1	Cylinder - Head
19	P084464	1	Clip - Cylinder head lock
20	P009667	1	Lid - Valve
21	P009665	1	Valve
22	P009666	1	Block - Valve
23	A043627	2	Pin - Block dowel
24	P089043	1	Piston (Threaded end)
25	P009674	1	Clip - Exhaust
26	P084463	1	Cylinder bushing assembly (Includes item No. 27, 28 & 29)
27		1	Cylinder
28	S001157	1	Pin - Cylinder bushing
29	P074473	1	Bushing - Cylinder
30	P084466	1	Clip - Lock nut
31	P089320	1	Packing - Piston
32	P009678	1	Sleeve - Piston gland
33	P084465	1	Nut - Piston gland
34	P089050	1	Butt - 6 1/4 " diameter
35	P089045	1	Locknut - Butt



2005-08 No. 9800 0533 01 © Copyright Stockholm, Sweden

