


Spare Parts List CP 0117 Demolition tool

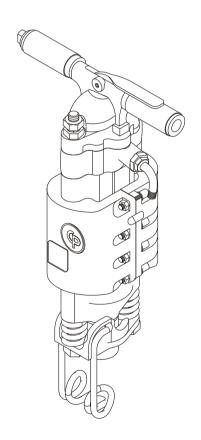



2005-09 No. 9800 0535 01

©Copyright Stockholm, Sweden CP 0117 Spare parts list

Contents	Pages
General information	4
Exploded views and tables	6-7

Spare parts list CP 0117

GENERAL INFORMATION

Welcome! Protect your investment in the world's finest air tools. Use genuine CP replacement parts.

The purchase of replacement parts for your CP tools deserves the same good judgment that resulted in the buying of the tools themselves. Each genuine CP part is made from carefully selected and inspected material, subjected to sophisticated machinery and finishing processes and heat-treated to produce just the right combination of hardness, ductility and impact resistance for its intended use. All parts are manufactured concurrently with those used in production tools, and are identical to them. The use of parts other than genuine CP replacement parts can lead to substandard performance, early failure, possible damage of other parts and, in some instances, unsafe conditions.


To reduce the risk of injury, read and understand the Operating Instructions manual and the percussion tool safety instructions before operating the tool.

CP 0117 is a pneumatic tool designed for heavy construction and plant maintenance work such as breaking heavy concrete, reinforced concrete, frozen ground, macadam, boulders and pavement. It has a two-bolt back head design.

CP 0117 Spare parts list

Spare parts list CP 0117

EXPLODED VIEW OF CP 0117

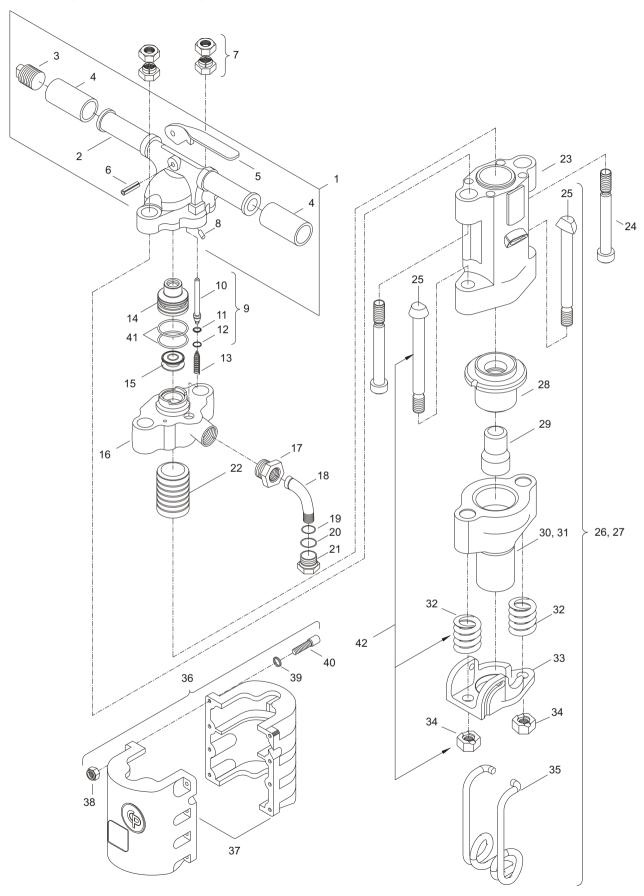

CP 0117 Spare parts list

1 Z8415441 1 Backhead complete (Includes item No.2, 3	0 4 5 6 9 9)
1 Z8415441 1 Backhead complete (Includes item No.2, 3 2 1 Backhead	5, 4, 5, 6 α ο)
3 R000560 1 Oil plug	
4 R005716 2 Backhead handle grip	
5 R005712 1 Throttle lever	
6 R133433 1 Throttle lever pin	
7 R005689 2 Backhead bolt nut	
8 R004976 1 Oil regulator plug	
9 R045373 1 Throttle valve (Includes Items 10, 11 & 12))
10 1 Throttle valve	
11 R098368 1 Throttle valve seat	
12 R098369 1 Throttle valve retaining ring	
13 R005717 1 Throttle valve spring	
14 D7414441 1 Inside valve bushing	
15 D7305441 1 Valve	
16 R075193 1 Backhead cylinder spacer	
17 F813728 1 Gooseneck adaptor	
18 R085269 1 Air inlet swivel	
19 R110317 1 O-ring	
20 P103521 1 O-ring	
21 R000530 1 Air swivel nut	
22 R000040 1 Piston	
23 R075185 1 Cylinder	
24 R075189 2 Backhead bolt	
25 R005684 2 Fronthead bolt	\
26 R077682 1 Spring type fronthead compete (1.1/8" Hex 25, 28, 29, 31, 32, 33, 34 & 35)	x) (Includes item No.
27 R077683 1 Spring type fronthead compete (1.1/4" Hex 25, 28, 29, 30, 32, 33, 34 & 35)	x) (Includes item No.
28 R075187 1 Anvil block bushing	
29 R075186 1 Anvil block	
30 R005724 1 Spring type fronthead (1.1/4" Hex)	
31 R005725 1 Spring type fronthead (1.1/8" Hex)	
32 R005729 2 Fronthead bolt spring	
33 R005728 1 Steel retainer support	
34 R005721 2 Fronthead bolt nut	
35 R005727 1 Steel retainer	
36 F813764 1 Muffler hood (Includes item No.37, 38, 39 8	& 40)
37* 1 Muffler hood	
38* Q2101000 8 Nylon insert nut	
39* C011005 16 Washer	
40* P070428 8 Socket head cap screw	
41 H0364441 2 O-ring	
42 Z3630441 1 Side bolt kit, includes one pair of complete (Item No. 25, 32 & 34)	e bolt assembly

ITEMS MARKED THUS * ARE APPLICABLE TO CP 0117 S ONLY.



2005-09 No. 9800 0535 01

©Copyright Stockholm, Sweden

